

Used Equipment for Sale



(2) - 2503, Series 2506

*Please contact us for pricing at 863-299-2111 or email orders@brown-intl.com
All renovated equipment is subject to availability .*

The rework of the finisher goes through four stages:

1. Dismantling the machine down to the smallest pieces, all of which are checked by experienced technicians.
2. The reassembled components must meet component specifications. All worn out or damaged parts such as bushings, rings, hubs, and lubricators are replaced. The motor and drive are evaluated, rewinding, rebuilding as necessary. New electrical, pneumatic and lubrication systems are also installed on the machine.
3. Reassembly of the machine is performed per specifications and new safety decals are applied.
4. Each reassembled machine is inspected and run to assure it is operating properly. Finally a one year limited warranty is provided to the “just like new” machine and ready for delivery.